
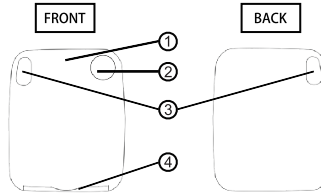



 


Front

<p>Changing the Alert Distance</p> <ol style="list-style-type: none"> 1. Launch Echo and tap on the top left icon in Tag List. 2. Tap on the Settings tab to setup the Tag. 3. Adjust the Alert distance slider to set your preferred distance. Note that the effective Bluetooth range is affected by barriers or interference from other Bluetooth signals. <p>Key Functions</p> <p>Anti-Lost</p> <ol style="list-style-type: none"> 1. When your phone and the Tag are out of Bluetooth range, both will alert. 2. Bring them back within Bluetooth range to stop the alert. 3. Tap on Stop on your phone to cancel the phone alert. 4. You are unable to manually cancel the Tag alert. <p>Find Your Phone</p> <ol style="list-style-type: none"> 1. When the Tag is within Bluetooth range, you can use it to find your phone. 2. Press the button on the Tag twice. Your phone will start to sound the alert. 3. Locate your phone by following the alert ringtone. 4. Launch Echo and tap on Stop to stop the alert. <p>Find Your Tag</p> <ol style="list-style-type: none"> 1. When the Tag is within Bluetooth range, you can use your phone to find it. 2. Launch Echo and tap the Tag you wish to find. Tap on the Tag tab. 3. Tap on the Alert Tag button to trigger the Tag. 4. Locate your Tag by following the alert sound. 5. you can tap on the alert button in the APP to stop it. <p>Crowd Searching</p> <ol style="list-style-type: none"> 1. Launch Echo and tap on the top left icon in Tag List. 	<ol style="list-style-type: none"> 2. Tap on Crowd Searching and ensure that Crowd Searching is enabled. 3. Go back to Tag List and swipe left on the lost Tag in Tag List. 4. Tap on Lost to report the Tag as lost. 5. When someone locates your Tag, you will receive a notification with the updated location. Tap on the notification to see its location on the map. <p>Last Known Location & Saved Location</p> <ol style="list-style-type: none"> 1. Launch Echo and tap the Tag you wish to find. Tap on the Tag tab. 2. Tap on the top right location icon to view the map. 3. Tap on the top right location list icon to view the Location List. 4. The top item is the Last Known Location. Entries below it are saved locations. <p>You can save a location by pressing the Tag once.</p> <ol style="list-style-type: none"> 5. Tap on a location in the Location List and you will see it on the map marked by a pin. Tap on Go to Tag to start navigation to the selected location. <p>Do Not Disturb</p> <p>You can schedule periods during which your phone and Tag would not alert. This is useful if you prefer not to be disturbed during times such as a meeting, movie or while you are sleeping.</p> <ol style="list-style-type: none"> 1. Launch Echo and tap on the top left icon in Tag List. 2. Tap on the Do Not Disturb switch to enable. 3. Tap on Schedule to set the Do Not Disturb period. 4. Select the time range. Tap Confirm to save. 5. Choose the day of the week. Tap on the top left arrow to go confirm. 	<ol style="list-style-type: none"> 6. Tap on Save on the top right. Your schedule will appear under Scheduled. <p>Remotely Turn OFF Tag</p> <ol style="list-style-type: none"> 1. When the Tag is within Bluetooth range, you can turn it off with your phone. 2. Launch Echo and tap on the Tag you wish to turn off. Tap on the Tag tab. 3. Tap on the Settings tab and then tap on Turn Off Tag. The Tag will sound a long beep to signal that it is powering off. 4. Your phone will alert as it detects that the Tag has disconnected. Tap on Stop to cancel the alert. 5. Your Tag is now turned off. Remember to turn it on again to start tracking it. <p>Remote Control</p> <p>Remotely Take Photos or Videos</p> <ol style="list-style-type: none"> 1. Launch Echo and tap the Tag you wish to use as a remote. 2. Tap on the Media tab. Tap on Photo or Video. 3. Press the button on the Tag to remotely take a photo or video. <p>Remotely Record Voice Memos</p> <ol style="list-style-type: none"> 1. Launch Echo app and tap the Tag you wish to use as a remote. 2. Tap on the Media tab. Tap on Voice Memo. 3. Press the button on the Tag to start voice recording. Press again to stop. 	<p>Safety Instructions</p> <p>Read this manual carefully before putting the appliance into operation and keep this manual for future reference.</p> <ul style="list-style-type: none"> • Do not place the unit close to your ears. • The alarm is 120 dB loud. Use with care. • Keep batteries out of reach of children. • Swallowing may lead to serious injury in as little as 2 hours or death, due to chemical burns and potential perforation of the oesophagus. • If you suspect your child has swallowed or inserted a button battery immediately call local emergency. • Examine devices and make sure the battery compartment is correctly secured, e.g. that the screw or other mechanical fastener is tightened. Do not use if compartment is not secure. • Dispose of used button batteries immediately and safely. Flat batteries can still be dangerous. • Tell others about the risk associated with button batteries and how to keep their children safe. <p>Environmental Friendly Disposal</p> <p>Old electrical appliances must not be disposed of together with the residual waste, but have to be disposed of separately. The disposal at the communal collecting point via private persons is for free. The owner of old appliances is responsible to bring the appliances to these collecting points or to similar collection points. With this little personal effort, you contribute to recycle valuable raw materials and the treatment of toxic substances.</p> 	<p style="text-align: center;">Instructions</p> <h1 style="text-align: center;">2240</h1> <h2 style="text-align: center;">Anti Lost Echo Tag</h2>
6	7	8	9	

Back

<p>ENG Anti Lost Echo Tag, Bluetooth 4.0 Low Energy, with Echo APP, all you need for finding things.</p> <p>DE Anti Lost Echo Tag, Bluetooth 4.0 Low Energy, mit Echo APP, hiermit finden Sie all Ihre Sachen wieder.</p> <p>NL Anti Lost Echo Tag, Bluetooth 4.0 Low Energy, met Echo APP, alles wat je nodig hebt voor het vinden van je spullen.</p> <p>SWE Anti Lost Echo Tag, Bluetooth 4.0 Low Energy, med Echo APP, allt du behöver för att hitta saker.</p> <p>FR Anti Lost Echo Tag, Bluetooth 4.0 Low Energy, avec Echo APP, tout ce dont vous avez besoin pour trouver vos affaires.</p> <p>ES Anti Lost Echo Tag, Bluetooth 4.0 Low Energy, con la aplicación Echo, todo lo que necesita para encontrar cosas.</p> <p>Product Specification</p> 	<ul style="list-style-type: none"> • LED light: Flashes twice when the Tag is turned on. Flashes once when it is turned off and when the button is pressed. Blinks at a regular interval to indicate that the Tag is powered on. • Button: Press once to trigger function. The function depends on the screen selected. Press twice to find your phone. • Hole: Fasten the Tag to your belongings with a keyring, a piece of string or a metal cable. • Battery tray: Remove to replace battery. <p>APP Installation</p> <p>You need to download the Echo app in order to use the Echo Tag. The app is available for free on the Apple App Store and Google Play Store for iOS 10 and newer, and Android OS 4.3 and newer.</p>   <p>Scan the QR code to download the Echo app for your device.</p> <p>Change The Battery</p> <p>When the Tag's alert volume becomes very soft or if it turns off itself and set off the alert, it is most likely that it is low on battery. Replace with a CR2025 lithium button cell.</p>	<p>Echo app displays an estimated battery level for each connected Tag. Launch Echo and tap the Tag you wish to check. The top right grid displays the percentage of battery remaining.</p>  <ol style="list-style-type: none"> 1. Pull the battery tray out. 2. Replace the battery. Take note of the positive and negative ends of the battery. 3. Push the battery tray back in until it clicks in place. <p>Activation</p> <p>If your Tag comes with a battery insulator, remove it before use.</p>  <ol style="list-style-type: none"> 1. Pull the battery insulator outwards to remove. 2. Press and hold the button to turn on the Tag. 3. The Tag will beep twice and the LED will blink at regular intervals to indicate that the Tag is powered on. <p>Charging The Battery</p> <p>Turning the Tag on or off</p> <p>Turn On: Press and hold the button until the Tag beeps twice.</p> <p>Turn Off: Press and hold the button until you hear a long beep.</p>	<p>Pairing the Tag</p> <ol style="list-style-type: none"> 1. Ensure that the Echo app is downloaded and installed on your phone. 2. Ensure that Bluetooth is enabled on your phone. Launch Echo app. 3. The Tag will show up as Echo Tag under Unpaired Tags. Tap to pair. 4. The Tag will automatically be connected upon pairing. <p>Echo app navigation</p> <p>The bottom navigation bar consists of four tabs: List (≡) -Tag List displays all tags within Bluetooth range of your phone. Tag (⊙) -The Tag dashboard to control and setup your Alarm. Media (📁) -Create and browse your media content. Settings (⚙️) -Select your preferred settings.</p> <p>Disconnecting the Tag</p> <p>The Tag is disconnected once it is out of Bluetooth range of your phone. This includes situations where the Tag is powered off. Disconnected Tags will still appear under the Paired Tags section in the Tag List.</p> <p>Reconnecting the Tag</p> <p>The Tag automatically connects to the phone upon pairing. If a Tag goes out of Bluetooth range, it becomes disconnected. When the Tag comes back within range, it will automatically reconnect.</p> <p>Tag Customization</p> <p>Changing the Tag photo</p> <ol style="list-style-type: none"> 1. Launch Echo and tap the Tag you wish to customize. 2. Tap on the large round Tag or display photo to edit the photo. 3. Use a photo that helps you to easily identify the tag. 	<ol style="list-style-type: none"> 4. Choose to take a photo or select from the photo album. Then tap Save. <p>Renaming the Tag</p> <ol style="list-style-type: none"> 1. Launch Echo and tap the Tag you wish to rename. 2. Tap on the Settings tab to setup the Tag. 3. Tap on Tag name and enter a new name for the Tag. Then tap Save. <p>Changing the Alert Duration</p> <ol style="list-style-type: none"> 1. Launch Echo and tap on the top left icon in Tag List. Tap on Alert Settings. 2. Tap on Alert Duration to set the duration of your phone alert. 3. Select your preferred duration and tap Save. <p>Changing the Alert Tone</p> <ol style="list-style-type: none"> 1. Launch Echo and tap on the top left icon in Tag List. Tap on Alert Settings. 2. Tap on Alert Tone to select a preset alert tone. 3. Tap on the top left back button or swipe from the left edge of the screen to go back to the previous screen. Tap Save. <p>Creating an Alert Tone</p> <ol style="list-style-type: none"> 1. Launch Echo and tap on the top left icon in Tag List. Tap on Alert Settings. 2. Tap on Alert Tone. Tap on Add to record a new alert tone. 3. Tap the green button to start recording and press the button again to stop. Recording will automatically stop after 10 seconds. 4. Tap on Save if you are satisfied with the recording and name your new Alert Tone. Otherwise, tap on Record again to go back to recording. 5. Tap on the top left back button or swipe from the left edge of the screen to go back to the previous screen. Tap Save.
1	2	3	4	5